


## **Starter Housing Indexing Degree Chart**

## 292° 292° 292° 278° 262° 278° 218° GRIND TO 29" IF NECESSARY 158° 158° 158°

## VISIBLE DIFFERENCES


(Similar but non-interchangeable)

 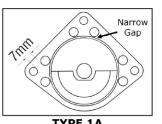


Wide Gap

TYPE 1A (180° flywheel opening) (Straight)

TYPE 1B (180° flywheel opening) (Offset)

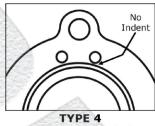




TYPE 4
(180° flywheel opening)
(No indent)

TYPE 5 (180° flywheel opening) (Indent-Offset)

## **Starter Mounting Flange Type**

 188°




**TYPE 1A** (180° flywheel opening) (Straight)




172°

 TYPE 1B (180° flywheel opening) (Offset)



 TYPE 2A (215° flywheel opening) (Straight)




TYPE 2B (215° flywheel opening) (Offset)



TYPE 3 (180° flywheel opening)



 TYPE 4 (180° flywheel opening) (No indent)



TYPE 5
(180° flywheel opening)
(Indent-Offset)



TYPE 6 (145° flywheel opening)



TYPE 7 (180° flywheel opening)



TYPE 8 (215° flywheel opening)

P.O. Box 1008, 826 - 45th St. E, Saskatoon, SK Canada, S7K 0W5

Telephone: 306-244-9818 | Toll-Free: 1-888-515-2726 | Fax: (306) 244-2223

info@alternatorstarter.com

www.alternatorstarter.com